
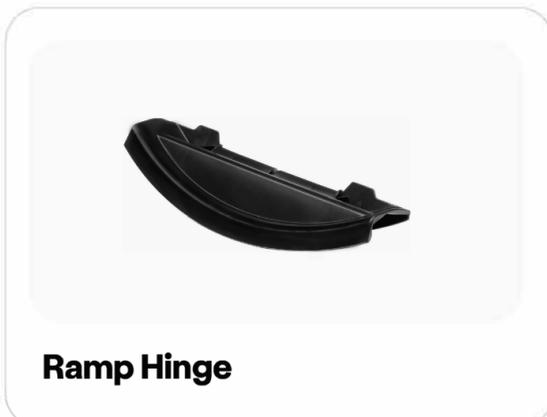


Ramp installation instructions

Parts required:

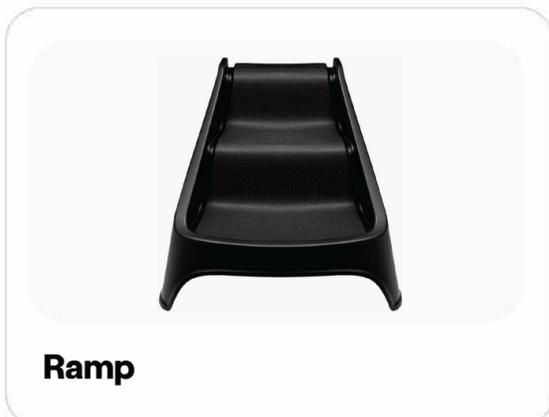

Please note

Before starting, please note: Your Litter-Robot 4 was shipped with one of the two fences shown below. Please identify which one you have and follow the directions for that version.



1 Older Fence



Ramp Hinge

- ✓ If you are using the older (mini) version of the Litter-Robot 4 fence (with a plastic shield), remove it and follow the instructions for the **Ramp Hinge**. The Litter-Robot 4 Ramp is not compatible with the Litter-Robot 4 older fence.



2 Newer Fence






Ramp Hinge Ramp Fence Hinge

- ✓ If you are using the newer version of the Litter-Robot 4 fence (without a plastic shield), you can either
a) remove it and follow the instructions for the Ramp Hinge.
b) keep the fence on and follow the instructions for the **Ramp Fence Hinge**.

Note

There is a rib in the center of the Ramp which aligns with a groove in the middle of each Hinge to ensure the Ramp is centered correctly during installation.

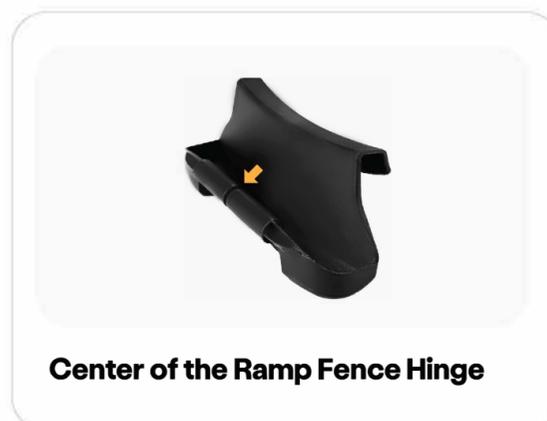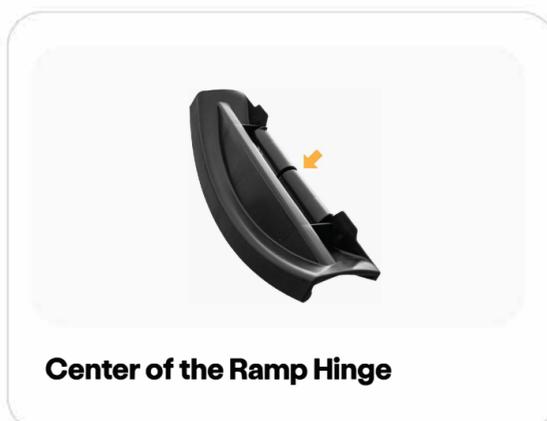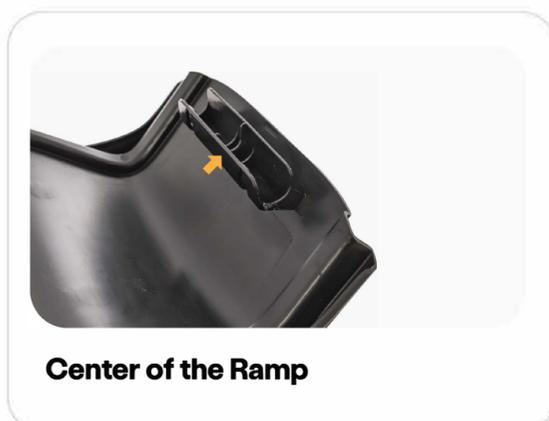

Installing the Ramp Hinge and Ramp

(no fence)



How to install



1

- ✔ Remove the fence by pulling up to disengage the snaps. If you do not have a fence, skip to the next step.



2

- ✔ Snap the Ramp Hinge onto the bezel by pressing down at the locations shown until you hear a click. Make sure both ends of the Hinge are resting tightly against the surface of the bezel.



3

- ✔ Orient the Ramp so it is parallel to the floor, then snap the Ramp onto the Hinge by pressing down.



4

- ✔ Rotate the Ramp down to the floor. The Ramp is now ready to use!



Note

- ✔ If litter collects on the steps of the Ramp, it can be rotated upwards to dump the litter back inside the globe. (Not applicable if fence is installed.)



5

- ✔ Press the Reset button  to zero the weight sensors.

Installing the Ramp Fence Hinge and Ramp

If the newer fence is not installed on your Litter-Robot 4, follow the steps below to install it. If your Litter-Robot 4 has the fence already installed, please skip the first three steps.



How to install



1

- ✔ Hold the fence upright inside the globe.




2

- ✔ Tilt the top of the fence toward you to align the front of the fence with the bezel.



3

- ✔ Gently press down on the back of the fence to snap it onto the bezel. Make sure the fence is level.

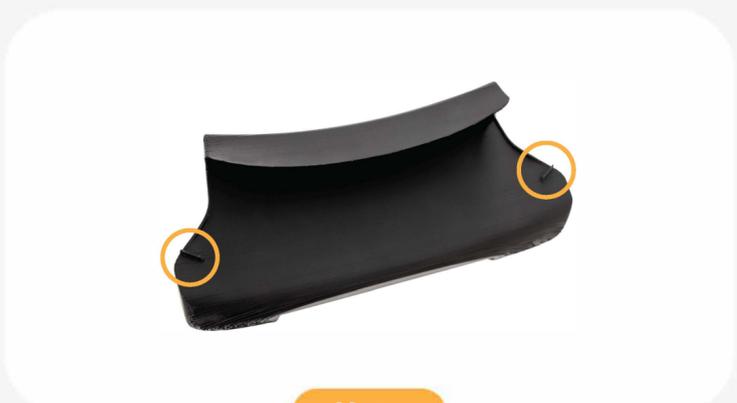

Note

- ✔ The back of the Ramp Fence Hinge has two small protrusions, one on each side. These are used to secure the Hinge to the edge of the fence.



4

- ✔ Place the Ramp Fence Hinge over the top of the fence as shown. Adjust the location left-to-right until centered. Press the area behind the two small protrusions to snap it onto the edge of the fence.



5

- ✔ Align the Ramp with the Hinge and press down to snap in place. Rotate the Ramp down to the floor. The Ramp is now ready to use!



6

- ✔ Press the Reset button  to zero the weight sensors.